

Programming Instructions for Genie Keypad

Dip switch positions
u,u,u,u
u,u,d
u,d,u
u,d,d
d,u,u
d,u,d
d,d,u
d,d,d

in door code
7
6
5
4
3
2
1
0

To find door code use the dip switch settings from the receiver or transmitter. Group in three's starting from the first switch. Example: If the first three switches are in the up position the first number in the door code will be 7

Step 1.

Slide cover up and press 3, 5, 7 #

Step 2.

Enter PIN number and press #

Step 3

Enter door code from chart above
and then press the * key

To reset and and clear, open cover halfway and press and hold the 8 key and the # key while opening the cover all the way. Do this step before Step 1