

Programming Instructions for Genie Intellicode Old style Black with slide up cover

Step 1

- Press 3,5,7, Program
- Enter PIN # (3-8 digits)
- Press Program
- Close cover

Step 2

- Find “learn button” and press once and release
- Enter PIN # and press Send 3 times. The third time door should activate.

** To reset to factory setting

- Before step one press and hold the # key and the #8 key while opening the cover all the way.

Programming Instructions for Genie Intellicode New style with white flip up cover

Step 1

- Press 3,5,7, Program
- Enter PIN # (3-8 digits)
- Press Program
- Close cover

Step 2

- Find “learn button” and press once and release
- Enter PIN # and press the up/down arrow key 3 times

** To reset to factory setting

- Press and hold the PROG key- keep holding while you press and hold the #6 key
- Press the up/down arrow key then release all buttons